



A2 Welcome Guide USER'S MANUAL


Customer Service

12-month limited warranty

Lifetime technical support

For FAQs and more information, please visit:
www.sephia.co.uk

What's in Includ

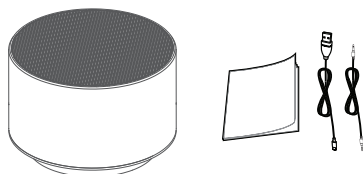


► The above pictures are just for reference only.

Attention

- 1, Use original or certified cables
- 2, Don't expose to liquids
- 3, Don't disassemble
- 4, Avoid dropping
- 5, Avoid extreme temperatures
- 6, Don't listen to music for long time in high volume environment.

At a Glance

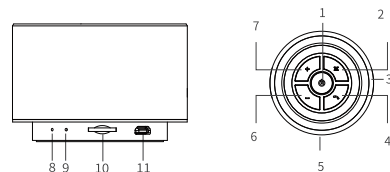

| | | | |
|---|----------------------------------|----|-------------------------|
| 1 | Power on / off | 7 | Volume up / Next track |
| 2 | Multi-function button | 8 | Microphone |
| 3 | Status indicator | 9 | Reset |
| 4 | Play / pause & Answer / end call | 10 | SD card slot |
| 5 | Charging indicator | 11 | Micro USB charging port |
| 6 | Volume down / Previous track | | |

Using your speaker

1. Turn on / off

Press and hold Power on / off button for 2 seconds, when LED ring around buttons rapidly flashing blue, speaker is in pairing mode. Press Power on / off button again to turn on / off the LED ring. Press and hold again to turn off speaker.

2, Select mode

Press M (Multi-Function button) to select mode between Bluetooth Mode / AUX Mode / SD Card Mode.

*Inserting an SD card will automatically switch to SD card mode.

A. Bluetooth mode

1. Turn on speaker.
2. Turn on bluetooth on Smartphone or other devices.
3. Find bluetooth name in wait list and tap it for connection.

3



When turned on, speaker will automatically connect to the last connected device if available. If not, speaker will enter pairing mode.

To pair a different device, press and hold play / pause button for 3 seconds to re-enter pairing mode. Then repeat the pairing steps.

Having connection problems?

Remove speaker from your device's Bluetooth history, ensure it is less than 3 feet away then try pairing again.

B, AUX-In mode

Connect speaker with provided 2 in 1 cable with Micro USB end, 3.5mm audio jack plugging other device.

Press M(Multi-function button) to enter AUX mode. When using AUX mode, control audio playback via the connected device.

C. SD card mode

In SD card mode, control audio playback as same as Bluetooth mode

* Support a class 4 or above micro SD card, up to 32GB

* support audio formats: MP3,WMA,WAV etc.

5



| | |
|-----------------------|-----------------------|
| Rapidly flashing blue | Pairing mode |
| Steady blue | Connected to a device |

► Play / pause



Answer / end call

Press Play / pause for a answering a coming call, double press to end the call



Force disconnect Bluetooth

Press and hold play / pause to disconnect bluetooth, speaker enters to pairing mode



Volume up / down

Press and hold for volume up / down



Next track/Previous track

Press to play next / previous track

4

3. Charge your speaker

Please charge your speaker when speaker gives tones.

| | |
|------------|---------------|
| Steady red | Charging |
| OFF | Fully Charged |

Using the included USB cable to charge your speaker and make sure it is fully charged before first use.

Specifications

| | |
|--|----------|
| Input | 5V/1A |
| Charging Time | 2-3hours |
| Audio Output | 3W |
| Battery Capacity | 500mAh |
| Play Time (varies by volume level and content) | 3.5hours |
| Size | |
| Weight | |
| Range | 10m/33 |

6